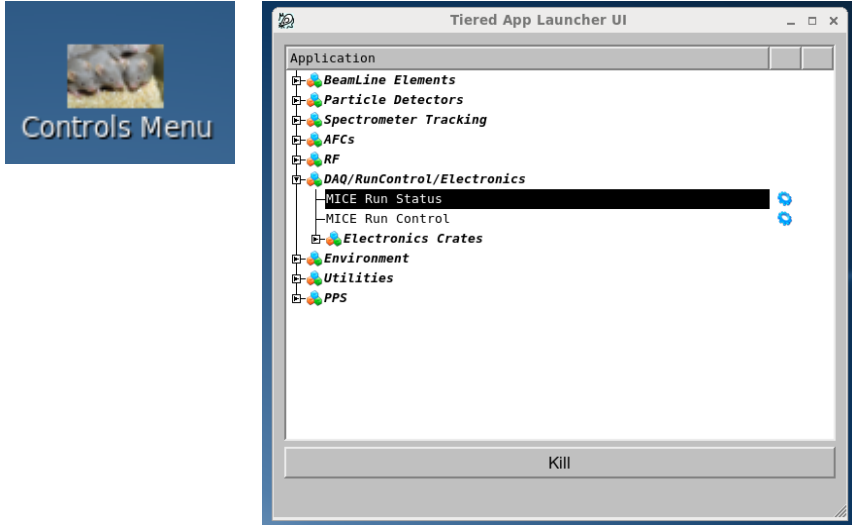
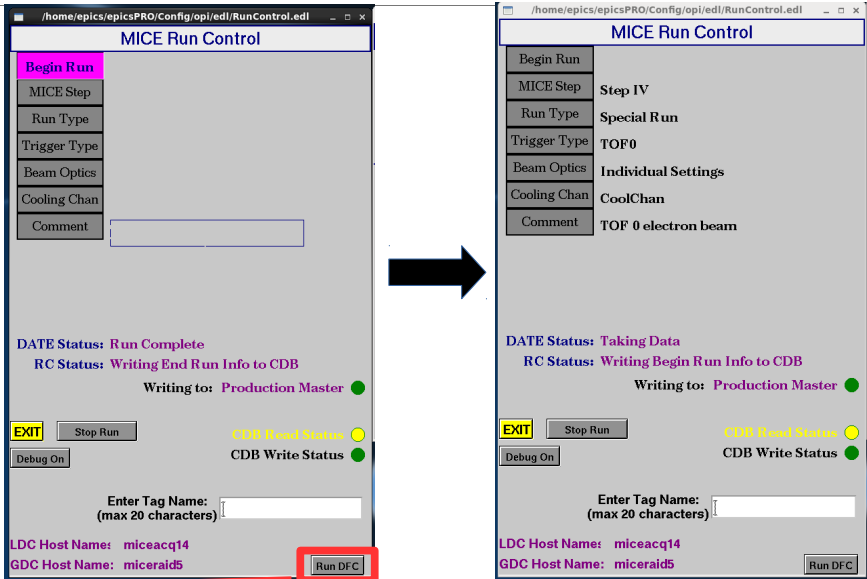


| Action | Expected Result |
|--|--|
| <ol style="list-style-type: none"> 1) If the Tiered App Launcher UI is not already open, double click on the “Controls Menu” button on the desktop to open the menu. 2) Navigate to the heading “DAQ/RunControl/Electronics” heading and expand the menu. 3) Open “MICE Run Control” and “MICE Run Status” <p><i>Notes:</i></p> <ol style="list-style-type: none"> 1) You should not have more than one copy of Run Control active in the MLCR at a time 2) The <i>blue</i> gear icon means the program is already running on the computer, if you can not find it, press the Kill button and try starting Run Control again. 3) The <i>red</i> 'x' means there is a problem opening the program, usually, this means there is already a version running on this computer. Try pressing the Kill button. |  |
| <ol style="list-style-type: none"> 1) Press the “Begin Run” button, and follow the series in descending order, filling out each section as instructed in the Run Plan (http://micewww.pp.rl.ac.uk/projects/operations/wiki/RunPlans) 2) Enter a short run comments 3) Press Start Process, this begins the DAQ arming 4) Once the DAQ is ready, the “Start Run” button appears, press that to begin the run. 5) At the end of the run press the button “Stop Run” 6) At the end of run press the “Run DFC” button to run the Data Mover. |  |